



Replacement of a shock absorber:

Removal of the shock absorber

- Jack-up the vehicle with the wheels off the ground.
- Place a 'lifting' jack under the lower spring seat.
- Compress the spring slightly.
- Release the lower shock absorber mounting and take away the shock absorber.

Shock absorber installation

- Position and tighten the upper shock absorber to the car body and tighten with the correct torque.
- Refit the lower mounting nut without fully tightening
- Put the car with the wheels on the ground
- Position the rear of the vehicle according to reference point H2 (see table below)
- Fully tighten lower shock absorber mountings to the specs. set below.

Tyres		195/65R15	205/55/16	205/50R17
H2 +12/-10	Saloon Hatchback	150 mm.	147 mm.	153 mm.
	Lower mounting	160 mm.	157 mm.	160 mm.

TIGHTENING TORQUES	daN.m
Upper mounting	6.2
Lower mounting	5.7

H2 : vehicle height measured between the jacking points of the car body and the ground (+/- 1mm)