

VOLKSWAGEN

VW Transporter, Combi, Multivan T5 (7HZ model - 6.03 >>) - Shock absorber identification



FI140EU


Shock absorber identification



To determine the shock absorber of a Volkswagen Transporter V, there are two solutions:

1 - By measuring the ride height :

H1 and H2 : Height of the center of the wheel on the lower flange of the wheel.

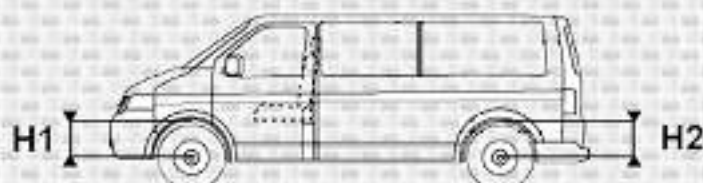

	Standard suspension (ND)	Heavy duty suspension (HD)	Sport suspension (SP)
H1 : Front ride height (en mm)	455 (+/- 10)	471 (+/- 10)	437 (+/- 10)
H2 : Rear ride height (en mm)	459 (+/- 15)	479 (+/- 15)	439 (+/- 10)

2 - with the optional code, present on the identification label (on the first page of the service book or under the dashboard, driver's side)

WVZZZZ 7HZ 4H000000											
7HM C01						Conf. KR					
MULTIVAN											
95 KW TDISG6											
AXD											
LATW						0000 0000 51					
Option:											
X10	85A	010	00K	H0E	J1U	MM3					
	1A1	102	2PW	1M1	5B0	6SL	T95				
	354	3JA	001		5J1	89V	8LB				
					1BA	00E					
3E1	-	4UF	400	4R1	400	N04	5MA				
SRM	2J0	EOA	2V1		0UD	8YA					
1D0	ABE	0EL	USA	1N1	3L3	1A3	1N1				



	Standard suspension (ND)	Heavy duty suspension (HD)	Sport suspension (SP)
Multivan (K4H)	1BA / 2MF / A8B / A9K	1BB / 1B / 2MG / 2MK / 2ML	1BV / 2MD
Camping car (K4L)	1BA / 2MF / A8B / A9K	1BB / 1B / 2MG / 2MK / 2ML	
Fourgon, Minibus (K4A / K4B)	1BA / 2MF / A8B / A9K	1BB / 1B / 2MG / 2MK / 2ML	1BV / 2MD

VOLKSWAGEN

MONROE		ORIGINAL		ORIGINAL	
TRANSPORTER, MULTIVAN T5					
T5 (4MOTION)	03-	V4505	MR211	V1169	
T5 (4MOTION)	03-	V4505	MR211	V1170	

Except total weight over 3.0, 3.2 tonnes

You will find all shocks in our online catalog :
www.monroecatalogue.eu